

Set up the CNCR Non-Contact Radar Level Sensor



Download the app:

Scan this QR code and then download either the App Store or Google Play version of the Wireless Device Configurator app suited to your phone.


Here are the URLs if the QR codes are uncooperative.

<https://apps.apple.com/us/app/wireless-device-configurator/id1531831585>

https://play.google.com/store/apps/details?id=com.vega.wireless.device.configurator&hl=en_US&gl=US


When setting up each sensor, you need to enter the sensor's Bluetooth Access Code to activate it.

To enable Bluetooth software enter company ID code:

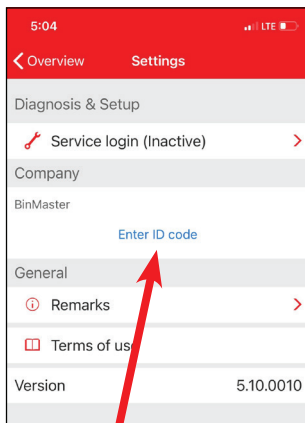

BMYQXZ

Where to find the Access Code on the unit:

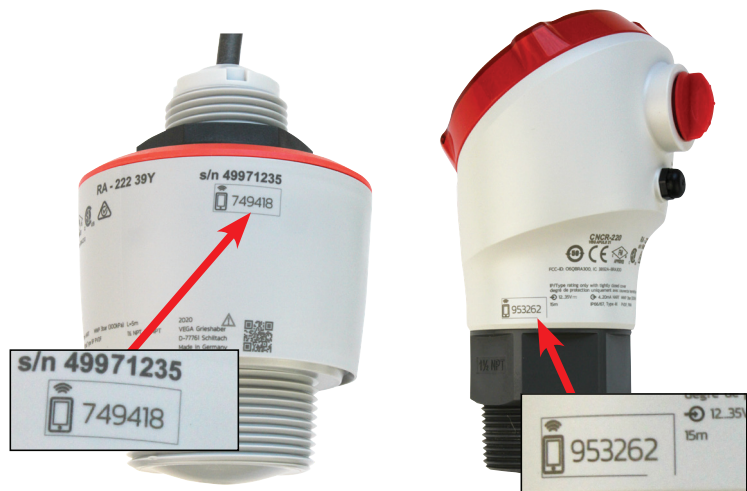

Download the manual:

Scan this QR code to visit the CNCR Manual web page.

Then select the manual appropriate to the CNCR sensor you are installing.

Here is the URL if the QR code is uncooperative.

<https://www.binmaster.com/products/product/cncr-manuals>

