


Internal Airpad Mounting Kit

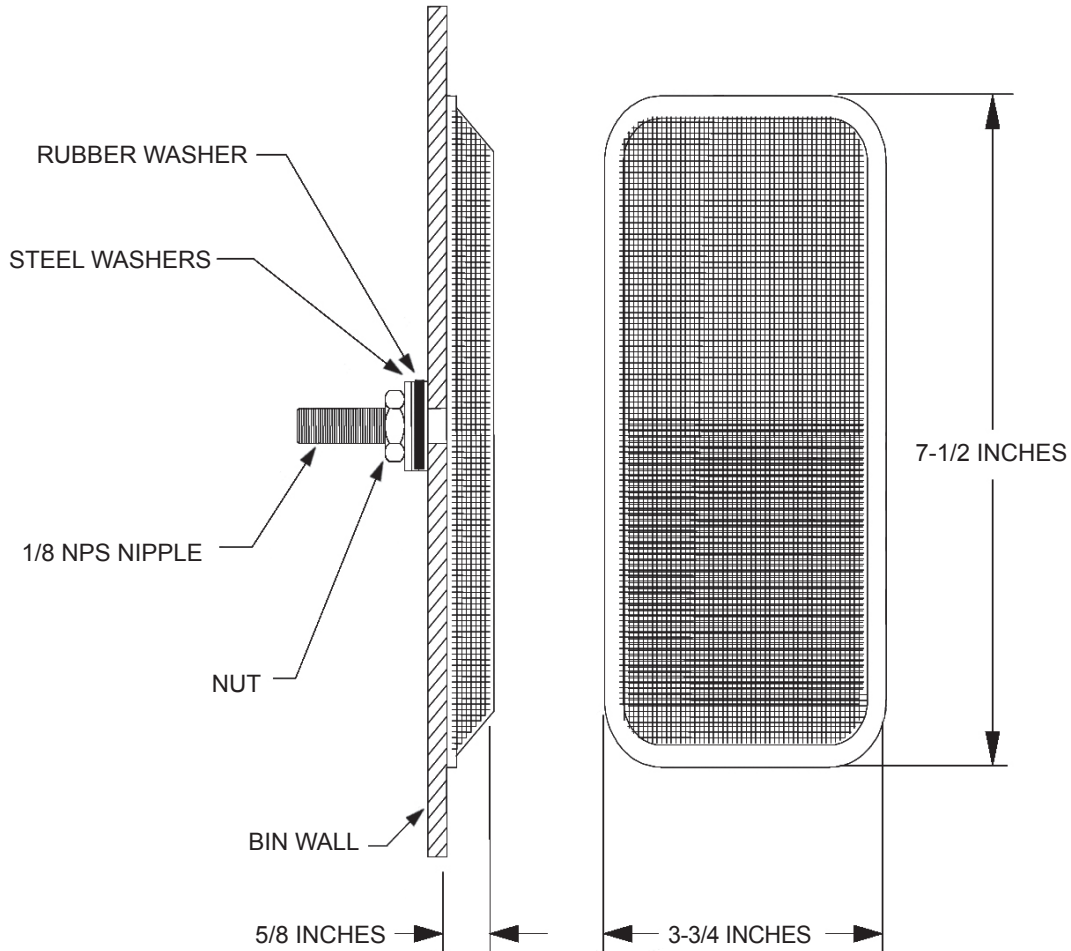

INTERNAL MOUNTING INSTRUCTIONS

Drill 7/16" hole through bin wall and insert special tank nipple through the hole. Attach Airpad and lock into place with the locknut and rubber washer.